

## BEDIENUNGSANLEITUNG LS 950 OPERATING MANUAL LS 950

**1 Montage / Assembly ZL 801**



ZL 801

**2 Montage / Assembly LS 950**



PUSH = UNLOCK

**3 Funktionen / Functions**



10m = max. Lux

**4 Akkuladung / Charging batteries LS 950**



max. 500 mA

100 - 240 V

**On**  
min. 1 sec.  
Level 1

**Off**  
min. 1 sec.

min. 2 sec.  
Level 5